



Installation Instructions

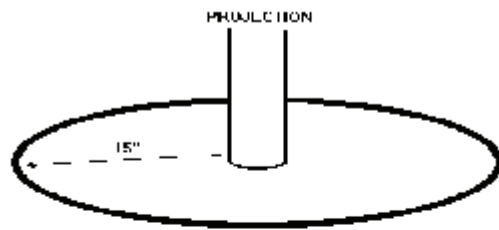

STEP 1


Clean and prepare surface 15" in all directions from the penetration. Check with roofing manufacturer to determine if any special preparations are required.

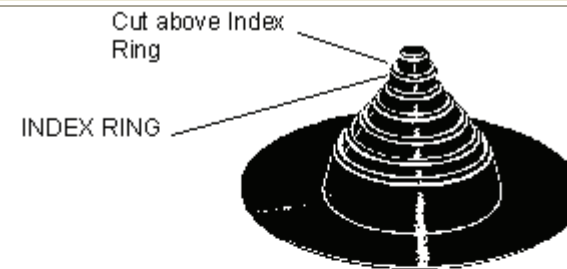

STEP 2

Select proper step of the flashing and cut off above index ring. REMEMBER: When in doubt, cut the smaller size. Clean and prime flange in accordance with roofing manufacturer's recommendations.


APPROVED ADHESIVE

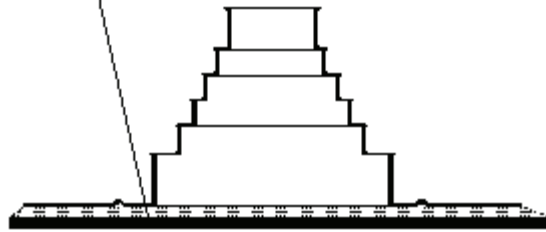

STEP 3

Apply roofing manufacturers' specified adhesive on base flange of boot and place boot around projection and complete attachment of flashing to roofing, according to roofing manufacturers' specification.

SNAPLOCK
Stainless Steel
Clamp Band

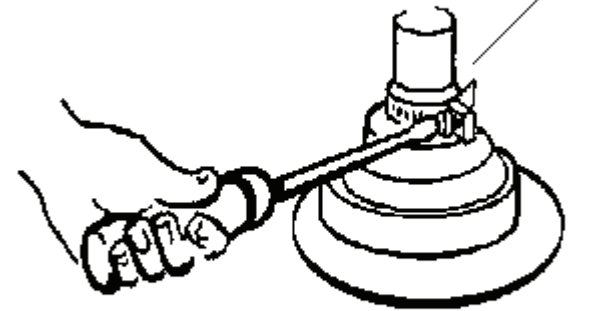

STEP 4

Using the Stainless Steel SnapLock Clamp, place at top of boot and tighten to projection.

PORTALS PLUS 815 Kimberly Drive, Carol Stream, IL 60188

TEL: (800) 624-8642 FAX: (866) 466-9335

All information is subject to change without notice. Dimensions and specifications shown are within manufacturing tolerances.
© Copyright Commercial Products Group of Hart & Cooley, Inc., January, 2008. All Rights Reserved.