


## Installation Instructions

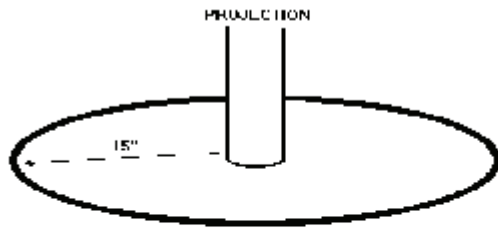

### STEP 1

Clean and prepare surface 15" in all directions from the penetration. Check with Roofing Manufacturer to determine if any special preparations are required.


Cut above Index Ring

INDEX RING





### STEP 2

Select proper step of the flashing and cut off above index ring. REMEMBER: When in doubt, cut the smaller size.

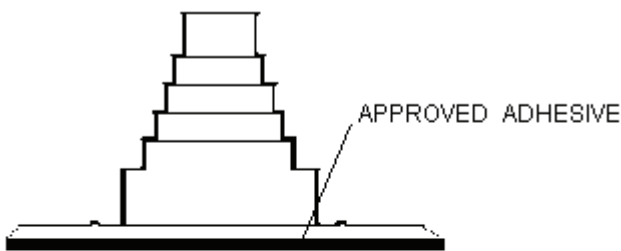

### STEP 3

After cleaning and priming flange, apply Roofing Manufacturers' specified adhesive on base flange of Retrofit Boot and place Retrofit Boot around projection. Complete attachment of flashing to roofing, according to Roofing Manufacturers' Specification.

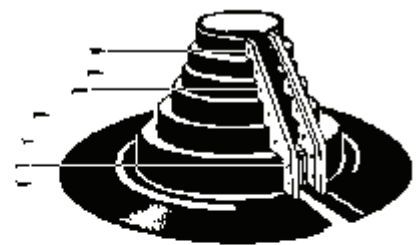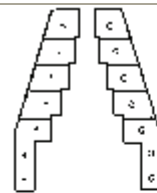

### STEP 4

Using tin snips, cut clamping plate to fit Retrofit Boot.


Clamping plates are to be placed on each side of rubber flange. The plate with the dipped holes is placed to the right side of the flange and the plate with the large holes goes to the left side. Screws are to be installed left to right.



### STEP 5

Using the special stainless steel band clamp, fit to top level of rubber flashing and install stainless screw and tighten around pipe.

SQUARE TUBING    ROUND PIPES    ANGLE IRON

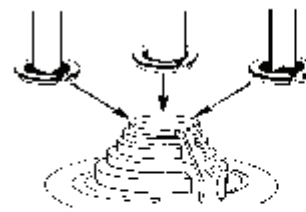

### STEP 6

When using an adapter,  
1 - fit the adapter around the penetration,  
2 - fit into the top of the Retrofit Boot,  
3 - tighten clamp.