


Installation Instructions

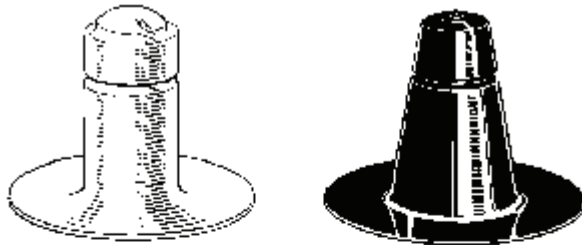


STEP 1

Determine which Breather/Vent is required.


NOTE: Aluminum & Black Plastic Breather/Vent can be used with BUR, Modified, or Single Ply roof membranes. Use White Plastic Breather/Vent only with the appropriate Single Ply roof membranes.

Breather allows air flow in two (2) directions (IN & OUT)
Vent only allows air flow in one (1) direction (OUT)

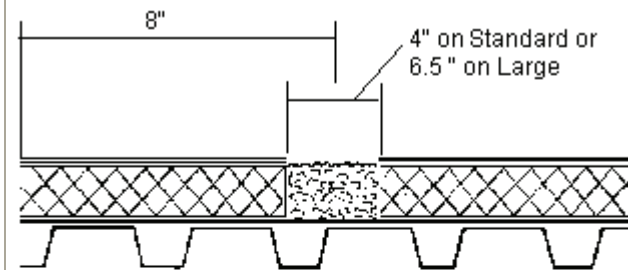


STEP 2

Determine location of vent. Clean and prepare at least 8" in each direction from center of Breather/Vent. Cut hole in existing roof membrane and insulation, to expose roof deck. Fill hole with loose fill insulation. Clean and prime flange as recommended by roofing Membrane Manufacturer.

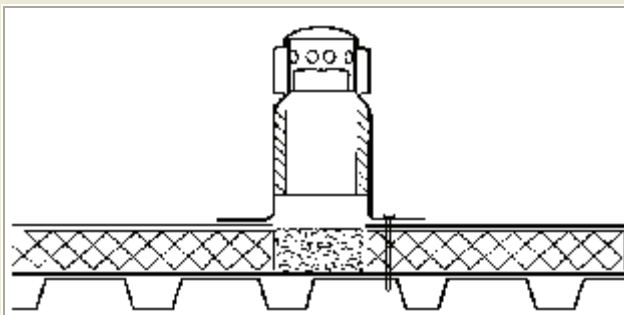

STEP 3

Place Breather/Vent over hole. WITH SINGLE PLY MEMBRANE ATTACH VENT TO ROOF DECK WITH APPROVED FASTENER. Clean and prepare Breather/Vent per Roof Manufacturer.

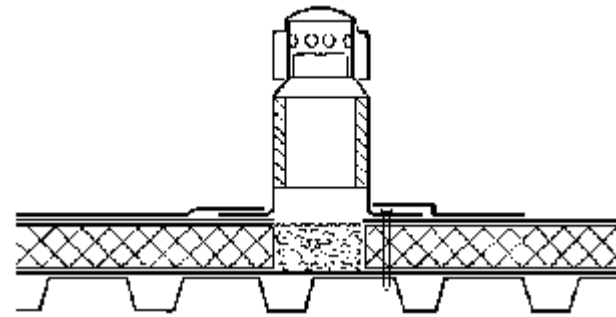

STEP 4

Flash Breather/Vent with appropriate flashing material per Roofing Manufacturer's recommendations.

PORTALS PLUS 815 Kimberly Drive, Carol Stream, IL 60188

TEL: (800) 624-8642 FAX: (866) 466-9335

All information is subject to change without notice. Dimensions and specifications shown are within manufacturing tolerances.
© Copyright Commercial Products Group of Hart & Cooley, Inc., January, 2008. All Rights Reserved.